


## LINE VAC™ (STAINLESS STEEL) INSTALLATION & MAINTENANCE

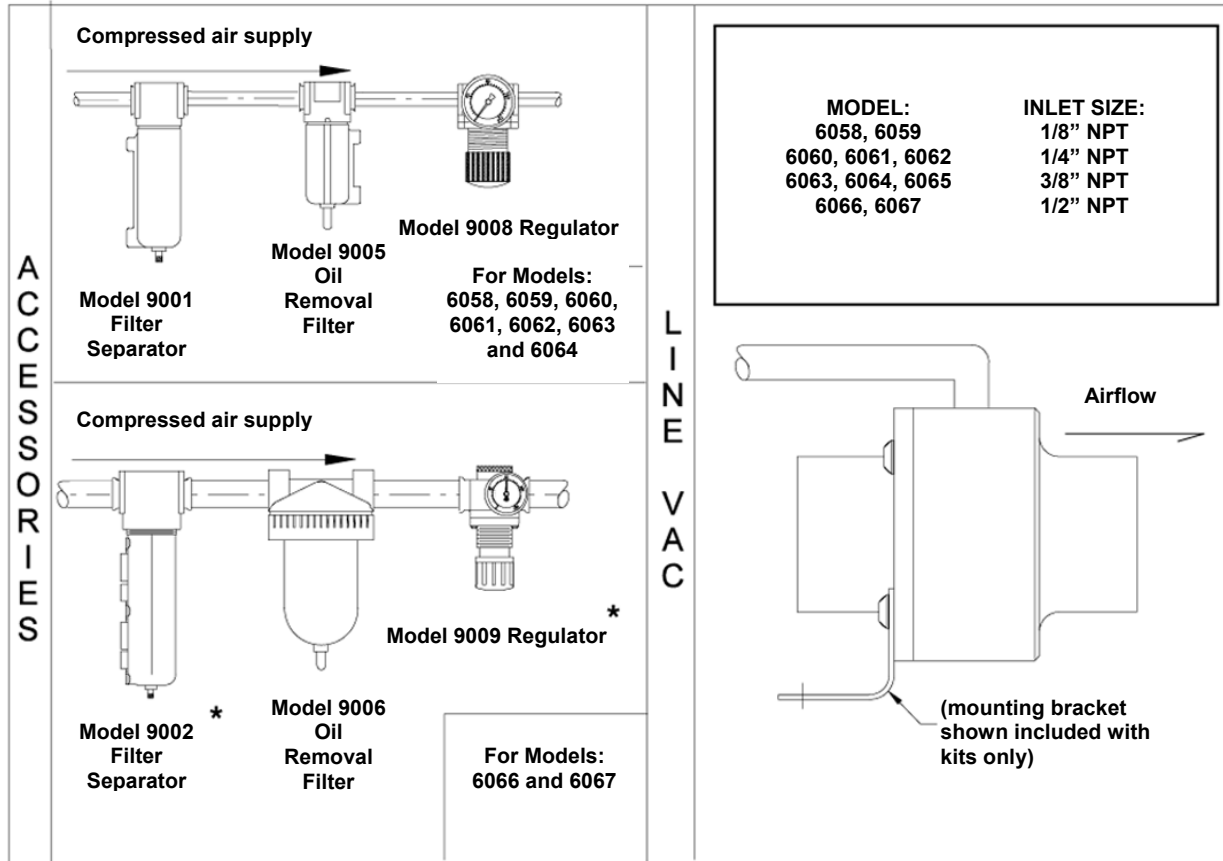

\* For Model 6065 – Use Model 9032 Filter Separator and Model 9033 Pressure Regulator

### COMPRESSED AIR LINE SIZES

For Line Vac Model 6058-6064 use 1/4" pipe or 3/8" hose for runs up to 25' (7.6m) long. For runs up to 50' (15.2m), use 3/8" pipe or 1/2" hose and for runs over 50' (15.2m), use 1/2" pipe or larger. For Line Vac Model 6065-6067, use 1/2" pipe or larger. Do not use restrictive fittings or undersized lines that can "starve" the Line Vac by causing excessive line pressure drop.

### COMPRESSED AIR SUPPLY

With proper filtration and separation of dirt, moisture and oil from the compressed air supply, the Line Vac will operate for years with no maintenance required.

Use a 10 micron or smaller filter separator on the compressed air supply (Model 9001 Automatic Drain Filter Separator for Model 6058-6064, Model 9032 Automatic Drain Filter Separator for Model 6065 and Model 9002 Automatic Drain Filter Separator for Model 6066 and 6067).

To prevent problems associated with oil, use an oil removal filter (Model 9005 Oil Removal Filter for Model 6058-6063, Model 9006 Oil Removal Filter for Model 6064-6067). The oil removal filter should be used downstream from the automatic drain filter separator. Filters should be used close to each Line Vac, within 10 to 15' (3 to 4.6m) is best.

Line Vac is designed to use normal shop air supplies up to 100 PSIG (6.9 BAR). For infinite control of flow (conveying speed), pressure may be regulated (Model 9008 Pressure Regulator for Model 6058-6064, Model 9033 Pressure Regulator for Model 6065 and Model 9009 Pressure Regulator for Model 6066 and 6067).

**USING LINE VAC**


Mounting brackets are available for the Line Vac (included with kits only). In some cases, the Line Vac will be supported by the compressed air supply pipe.

Line Vac units are made in various sizes to be used with standard hose or tube. They perform best when mounted at the suction point, however, a hose or tube can be attached to either or both ends of the unit. Hose or tube should be straight when possible and bends minimized to reduce back pressure.

**WARNING: Do not use with any material that can create an explosive mixture.**

**HOW LINE VAC WORKS**

Compressed air flows through the inlet (1) into an annular plenum chamber (2). It is then injected into the throat through directed nozzles (3). These jets of air create a vacuum at the intake (4) which draws material in and accelerates it through the unit (5) at long vertical or horizontal distances.

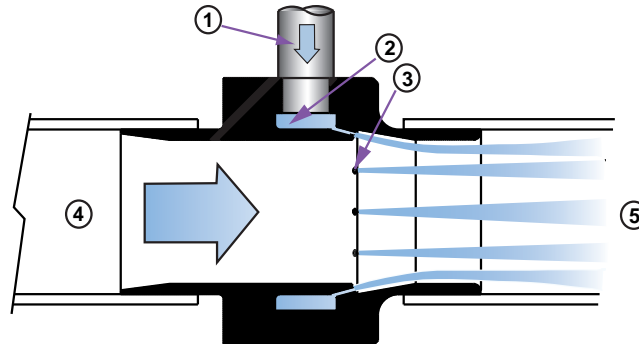**ADJUSTING THE LINE VAC**

The flow generators have a series of holes that convey the material. Conveying speed can be controlled with a pressure regulator. For greater speeds and conveying distances, the generator holes can be made larger with a drill (disassembly required - see "Cleaning"). It is recommended that all hole diameters be increased in 1/64" (.40mm) intervals and tested.

**TROUBLESHOOTING & MAINTENANCE**

**If There Is A Reduction In Flow Or Vacuum From The Line Vac**, check the pressure by installing a gauge at the compressed air inlet of the Line Vac. Large pressure drops are possible due to undersized lines, restrictive fittings and clogged filter elements.

**For replacement or repair filter and regulator parts, contact EXAIR at 1-800-903-9247 or [techhelp@exair.com](mailto:techhelp@exair.com). Call (513) 671-3322 for outside the US and Canada.**

**CLEANING**

If contaminants have clogged the Line Vac, remove all screws to disassemble the unit. Inspect each part for dirt contamination and a possible oil film on the flow generator. Clean each part and reassemble. The Line Vac consists of a body, a flow generator, two O-rings and a cap that holds the flow generator in place. The screws that hold the assembly together are on the intake side of the unit. When reassembling, the small holes of the flow generator should point to the exhaust end.

Occasionally, there is a build up which occurs in the throat of the Line Vac as a result of vapors in the atmosphere. Clean the surface with a solvent and a clean rag. To prevent contaminants from getting pushed back into the generator holes, perform this procedure with a small amount of compressed air passing through the Line Vac.

If you have any questions or problems, please contact:

Airtec Servicios  
 Av. Colorines # 621-26, San Luis Potosi, Mexico  
 Tel: 52+ 444 8180960 Fax: 52+ 444 8189512  
 Email: [info@airtec-servicios.com](mailto:info@airtec-servicios.com)  
 Website: <http://airtec.exair.com>