


THREADED LINE VAC™ INSTALLATION & MAINTENANCE

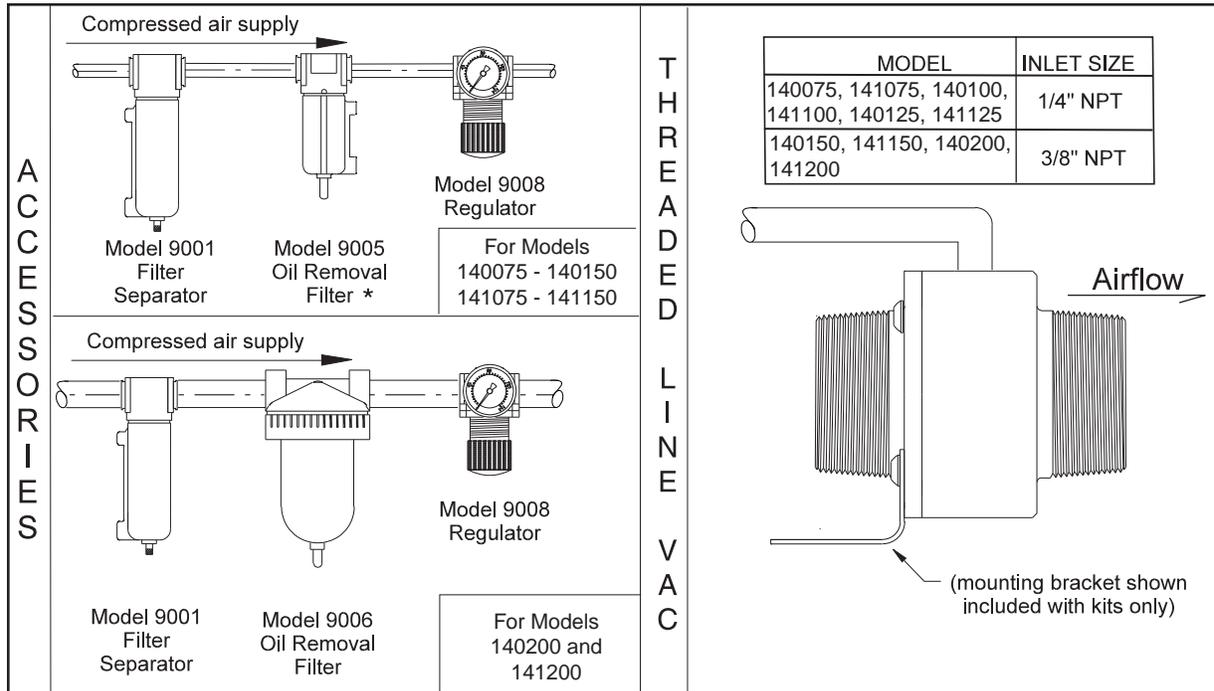

COMPRESSED AIR LINE SIZES

For aluminum models 140075 - 140200 and stainless steel models 141075 -141200 use 1/4" pipe or 3/8" hose for runs up to 25' (7.6m) long. For runs up to 50' (15.2m), use 3/8" pipe or 1/2" hose and for runs over 50' (15.2m), use 1/2" pipe or larger. For larger Threaded Line Vac models use 1/2" pipe or larger. Do not use restrictive fittings or undersized lines that can "starve" the Threaded Line Vac by causing excessive line pressure drop.

COMPRESSED AIR SUPPLY

With proper filtration and separation of dirt, moisture and oil from the compressed air supply, the Threaded Line Vac will operate for years with no maintenance required.

Use a 10 micron or smaller filter separator on the compressed air supply (Model 9001 Automatic Drain Filter Separator for all Threaded Line Vac models).

To prevent problems associated with oil, use an oil removal filter (Model 9005 Oil Removal Filter for Models 140075 - 140150 and Models 141075-141150, Model 9006 Oil Removal Filter for Model 140200 and 141200). The oil removal filter should be used downstream from the automatic drain filter separator. Filters should be used close to each Threaded Line Vac, within 10 to 15' (3 to 4.6m) is best.

The Threaded Line Vac is designed to use normal shop air supplies up to 100 PSIG (6.9 BAR). For infinite control of flow and force, pressure may be regulated (Model 9008 Pressure Regulator for all Threaded Line Vac models).

USING THE THREADED LINE VAC


Mounting brackets are available for the Threaded Line Vac (included with kits only). In some cases, the Threaded Line Vac will be supported by the compressed air supply pipe or conveying pipe.

Threaded Line Vac units are made in various sizes to be used with standard NPT pipe and associated couplers. They perform best when mounted near the suction point. Pipe can be attached to both ends of the unit. Pipe should be straight when possible and bends minimized to reduce back pressure. If bends are necessary, use long sweep elbows.

WARNING: Do not use with any material that can create an explosive mixture.

HOW THE THREADED LINE VAC WORKS

Compressed air flows through the inlet (1) into an annular plenum chamber (2). It is then injected into the throat through directed nozzles (3). These jets of air create a vacuum at the intake (4) which draws material in and accelerates it through the unit (5) at long vertical or horizontal distances.

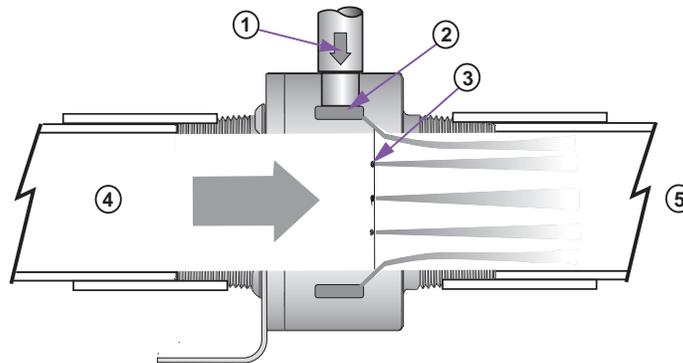

ADJUSTING THE THREADED LINE VAC

The flow generators have a series of holes that convey the material. Conveying speed can be controlled with a pressure regulator. For greater speeds and conveying distances, the generator holes can be made larger with a drill (disassembly required - see "Cleaning"). It is recommended that all hole diameters be increased in 1/64" (.40mm) intervals and tested.

TROUBLESHOOTING & MAINTENANCE

If There Is A Reduction In Flow Or Vacuum From The Threaded Line Vac, check the pressure by installing a gauge at the compressed air inlet of the Threaded Line Vac. Large pressure drops are possible due to undersized lines, restrictive fittings and clogged filter elements.

For replacement or repair filter and regulator parts, contact EXAIR at 1-800-903-9247 or techhelp@exair.com. Call (513) 671-3322 for outside the US and Canada.

CLEANING

If contaminants have clogged the Threaded Line Vac, remove all screws to disassemble the unit. Inspect each part for dirt contamination and a possible oil film on the flow generator. Clean each part and reassemble. The Threaded Line Vac consists of a body, a flow generator, two O-rings and a cap that holds the flow generator in place. The screws that hold the assembly together are on the intake side of the unit. When reassembling, the small holes of the flow generator should point to the exhaust end.

Occasionally, there is a build up which occurs in the throat of the Threaded Line Vac as a result of vapors in the atmosphere. Clean the surface with a solvent and a clean rag. To prevent contaminants from getting pushed back into the generator holes, perform this procedure with a small amount of compressed air passing through the Threaded Line Vac.

If you have any questions or problems, please contact:

Airtec Servicios

Av. Colorines # 621-26, San Luis Potosi, Mexico

Tel: 52+ 444 8180960 Fax: 52+ 444 8189512

Email: info@airtec-servicios.com

Website: <http://airtec.exair.com>